


## Beam Adjustment - All models

### Check

1. Align suitable beam setting equipment to headlamp.

2. Ensure headlamp height adjustment switch set to 'O'.

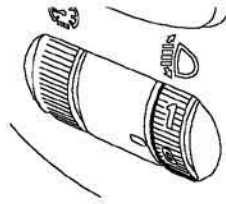

3. Switch headlamps on and measure main beam settings. Beam must be 1.0% below the horizontal and parallel to the vehicle centre line. If necessary, adjust headlamp to get correct beam settings.  
4. Align beam setting equipment to second headlamp and repeat check.  
5. Switch off headlamps and remove beam setting equipment.

### Adjust

1. Turn inner adjuster as necessary to get correct vertical beam setting.  
2. Turn outer adjuster as necessary to correct horizontal beam setting.

